



TELEFUNKEN

LED TV USER MANUAL

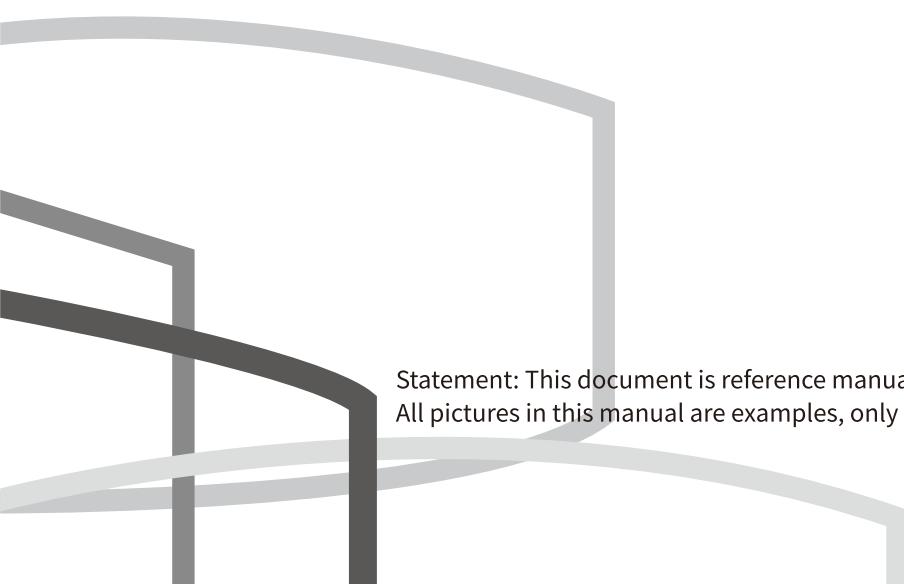

Statement: This document is reference manual, Product features are subject to change without notice.
All pictures in this manual are examples, only for reference actual product may differ from the pictures.

Warning

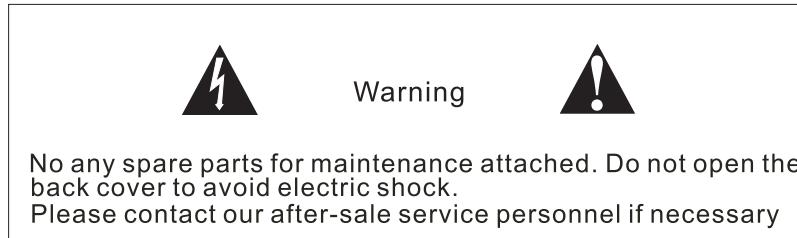

Warning: Do not open the back cover to avoid electric shock .No additional spare parts are inside the case .Any questions ,please contact our service personnel.



A triangle with a lightning arrow in:Remind you of probable higt voltage here in case of electric shock.



A triangle with an exclamatory mark in :Remind you that the parts here are very important .if replacement etc.is needed,please refer to relevant technical Specifications.

Warning:Do not put the TV in rainy or foggy places to prevent from fire or electric shock.Do not apply hard objects to attrite or knock on the liquid crystal screen since these may cause scratches or damages.

Warning: Modifying the product without any authorization is forbidden.


NOTE:

excessive sound pressure from earphones and headphones can cause hearing loss.





Safety

Please immediately pull out the AC power plug from adapter if there is an abnormal sound or smell or the TV has sound but no picture, and contact after sales support.

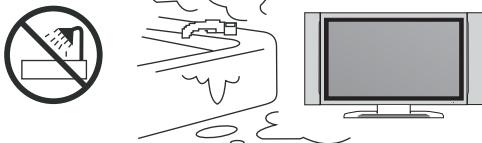

The TV should be kept free from rain, damp and dust to prevent electrical shock and short circuits.
Do not cover the ventilation openings with table clothes, curtains, newspapers etc.

The TV should be kept from high temperature heating objects or direct sunlight. It requires good ventilation. Allow 10cm between the TV and other appliances or built-in cabinet walls.

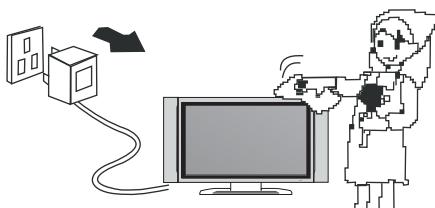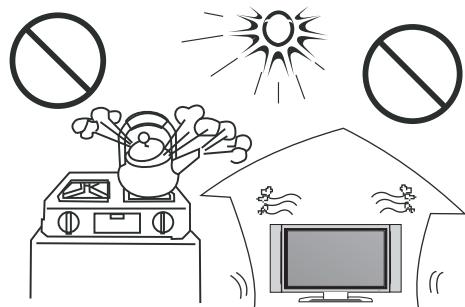


You may clean the display panel with a soft clean cloth after pulling out the power plug. Do not repeatedly wipe the panel, nor scrape, tap or strike the panel with a hard object.

Do not wipe the TV with any petrol, chemical or alcohol based solvents as it will lead to product damage of the panel and cabinet.




Safety

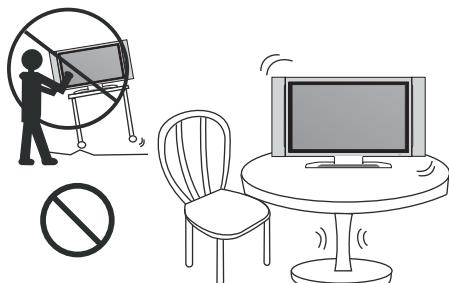



Do not place the TV on an unstable surface.

Do not place the power cord or other cables across a walkway in case it is trampled on. Do not overload the power cord or power socket.

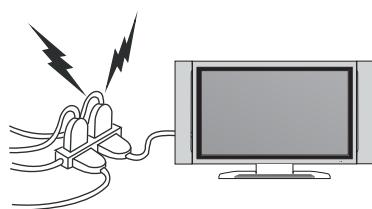

Do not disassemble the back cover as it contains high voltages inside and will cause electric shock. Internal adjustments and checks should only be conducted by qualified professionals.

Do not place naked flame sources, such as lit candles on or near the TV.
Please pull out the power plug and contact after sales support if there are abnormal objects or water in the TV.

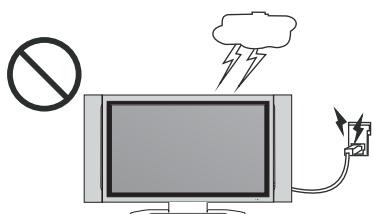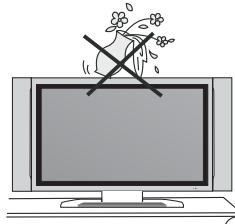


Pull out the power cord and antenna cable during electrical storms so the TV is not damaged by electrical surges. Keep all people away from the antenna cable during electrical storms.

Accessories

Please make sure the following items are included with your TV.
If any items are missing, contact your dealer.




Remote Control

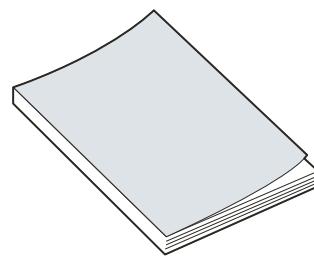

Instruction manual

Control panel

Control panel

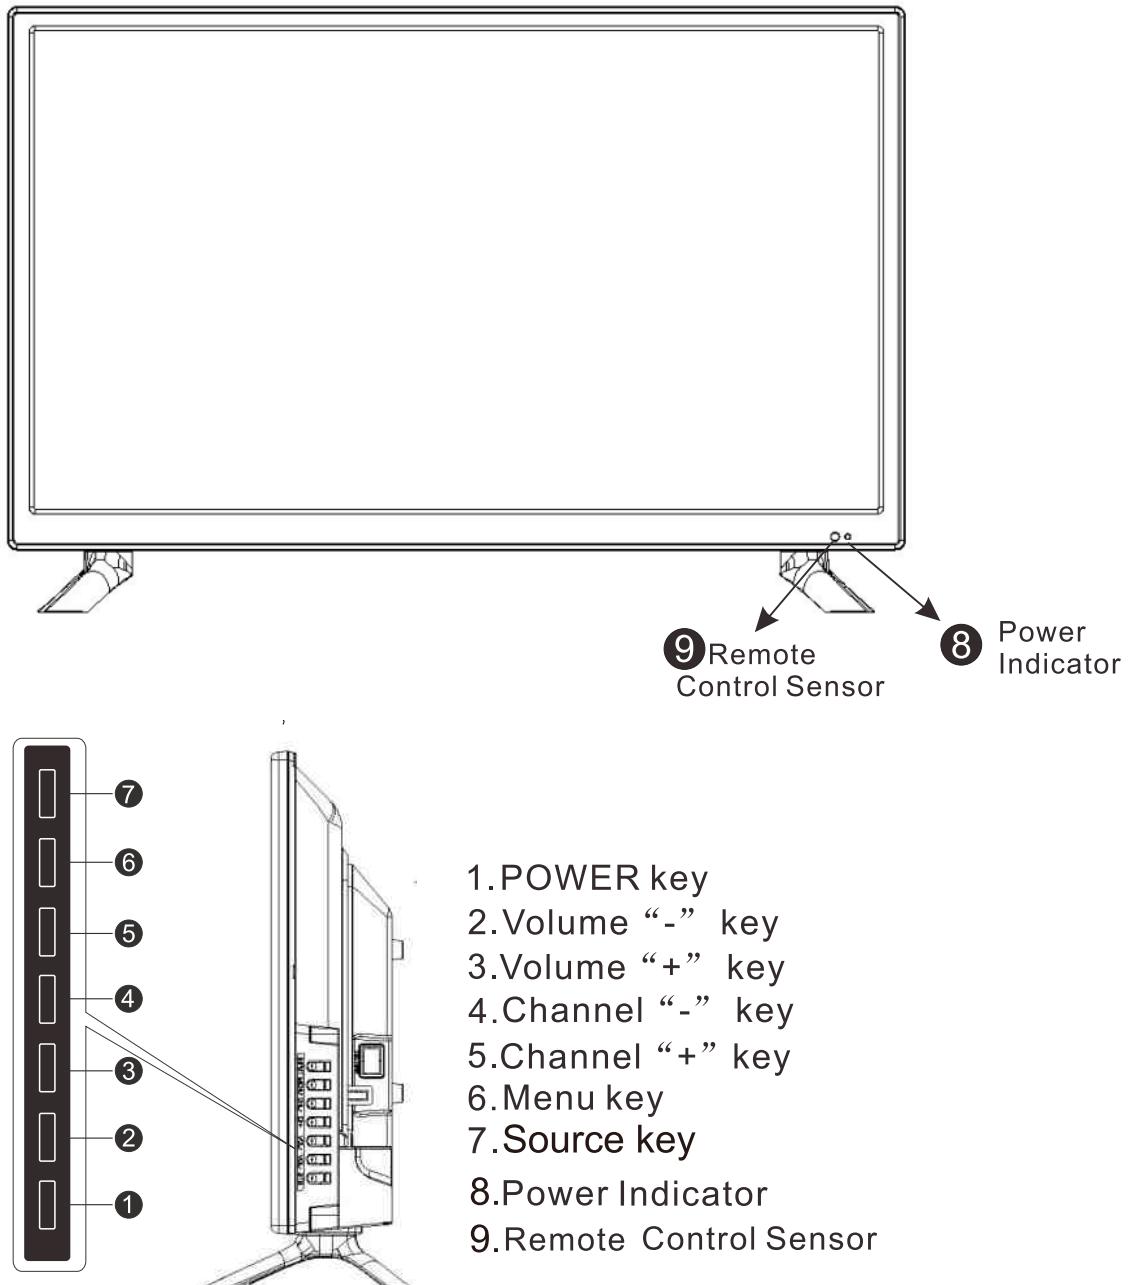

Introduction for Each Key

① POWER (ON/OFF)

Turn the TV on or enter into standby mode.

② Source

This set has different signal source modes, you may continue to press the Source button to select a signal source.

③ MENU

Enter/exit the main menu.

④ VOL- (V-)

Volume decreasing short cut key; enter into the next menu and adjust OSD options (decreasing).

⑤ VOL+ (V+)

Volume increasing short cut key; enter into the next menu and adjust OSD options (increasing).

⑥ CH-

Channel decreasing short cut key; decrease the channel No. and select the last option in the menu.

⑦ CH+

Channel increasing short cut key; increase the channel No. and select the next option in the menu.

⑧ Power/standby indicator

⑨ Remote control sensor

Descriptions of Television Remote Control



- : standby, turn on and off
- : mute sound
- 0-9: continue to press the keys to select a channel
- ◀: return to previous channel
- P.MODE: select the picture mode
- EPG: select EPG list
- S.MODE: select the sound mode
- SLEEP: set time for TV to turn off automatically
- INFO: press to display the current program information on the screen
- SOURCE: to select input source menu
- MENU: enter or exit menu
- EXIT: exit menu
- Arrows (◀/▶ /▲/▼) : Uses the four arrows to highlight different items in the TV menu or change the value
- ENTER: confirm or enter
- T.SHIFT: transformation
- ASPECT: aspect in or the current picture
- EPG: select EPG list
- TV/RADIO: select the DTV RADIO mode
- VOL+: increase the volume
- VOL-: decrease the volume
- CH+: select the channel forward
- CH-: select the channel backward
- TEXT: teletext
- REC: Record Button . (ONLY DTV MODE)
- AUDIO: press this button to switch the audio tracks carried by the program
- Red/Green/Yellow/Blue: use add-on functions in OSD menu
- ▶: play or pause media files .
- ◀▶: fast review and fast forward
- SUBTITLE: press into the Subtitle language menu
- FAV.LIST: Favorite list
- SIZE: teletext size
- HOLD: hold on or off for current page display (teletext)
- CANCEL: press to cancel what you are doing
- INDEX: teletext index

Note: All pictures in this manual are examples, only for reference
actual product may differ from the pictures.

Antenna Preparation


Notes:

The remote control shall be applied in effective reception scope of the television. Make the remote control point towards the infrared receiver of the liquid crystal television and ensure that there are no obstacles. Its normal operation distance will be shortened in direct sunlight or lamplight.

Be careful to use the remote control, avoid falling off or being trampled or splashed with liquids.

Batteries Installation of Remote-Control Unit

1. Turn the remote-control unit upside down. Scratch the grip of the battery compartment.
2. Install two new 1.5V AAA batteries, make sure the anode and cathode of the batteries matches the - +, marks inside the battery compartment. If not, the unit will be damaged.

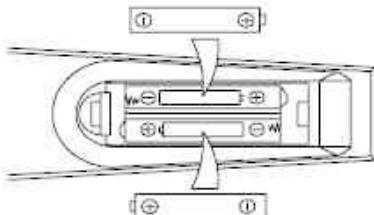

3. Close the battery compartment cover.


NOTES: Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Antenna Connections

We recommend you use a 75Ω coaxial cable so as to eliminate the disturbance caused by impedance mismatching. The antenna cable shall not be bundled together with the power cord.

Directly insert the 75Ω coaxial cable plug into the antenna socket when applying cable television.

Note: The antenna should be checked periodically. If clear image is not available, shut down the power and then carefully check the antenna.

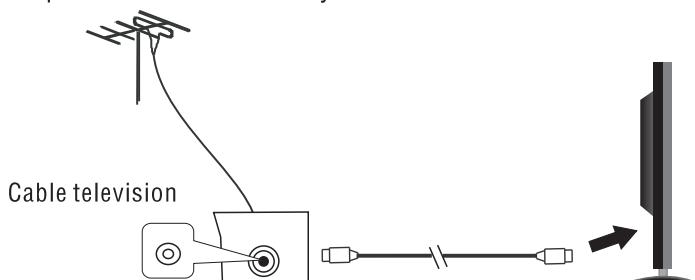

Please pay attention that the outlet to be grounded!

Power-on/Power-off

The television is in standby state when no images arise and the red indicating lamp shines.

Press the power button again on the remote control for the television the indicating lamp becomes green, and then television image is available.

Press the power button on the remote controller or the television to enter into standby state.

Power-saving & protection mode

1. In video or PC state, the television will enter into lower power sleep state (standby state) to conduct power saving and protection after several minutes with no signal inputs.


Channel Selection

Watching television programs


Connect the power cord, press POWER button to power on the television, then press the SOURCE button to select TV channel mode to watch television programs.

Select Channels Via Program No.


- 1.If you want to select program no. from 0-9: directly press numeral key to input the program no., it will enter into the selected program, e.g. select program no. 1

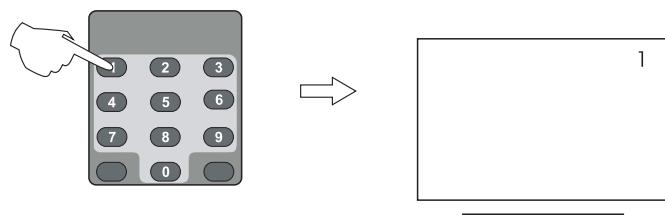

- 2.If you want to select program number from 10-99: Input the channel number you desired, e.g. select channel 12.

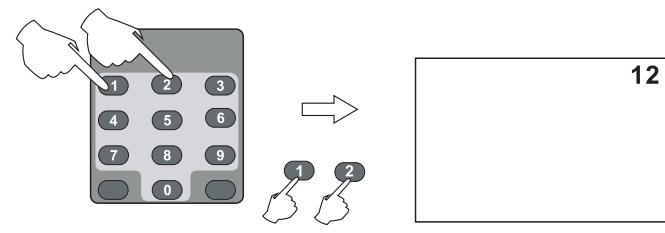


- 3.If you want to select program number from 100-100+: Input the channel number you desired, e.g. select channel 100.

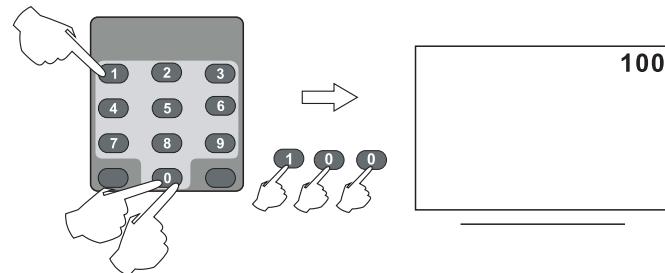

Channel select

1. Use the buttons on the television panel to conduct channel selection. First press "CH+/-" buttons on the side of the TV to enter into channel selection mode state.

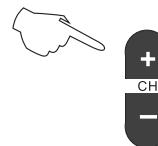


2. "CH+/-" buttons of the remote control may also be applied to conduct channel selection.

Channel return

Channel return


Return To Program

Press RECALL buttons to return to previous program.

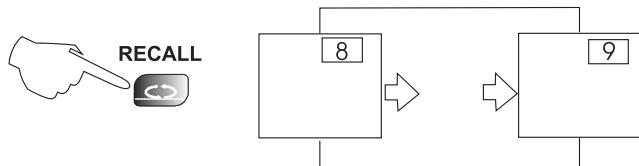


Volume control

1. Use the buttons “VOL +/VOL-” of television panel to control the volume.
2. “VOL+/VOL-” buttons on the remote control also manage volume control.

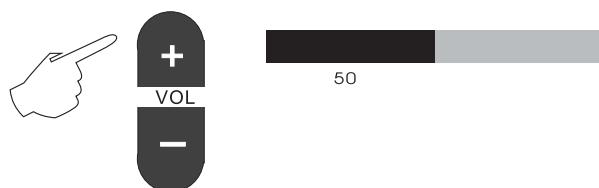


Sound elimination

Press “MUTE” button to eliminate the sound. Press the button again or press the volume control button of the television panel or the remote control for audio recovery.

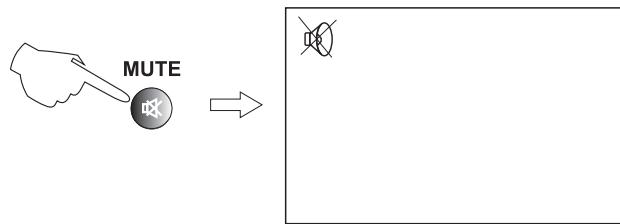


System state display

Press “DISPLAY” button of the remote control, then it will display the current program number, current input mode and information relevant.

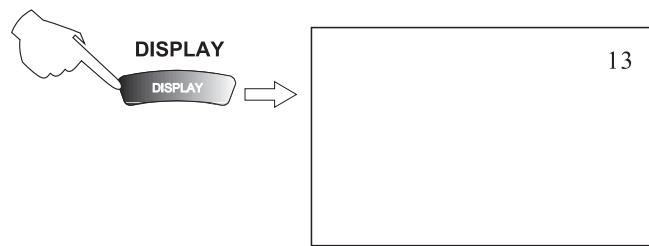

SELECT INPUT SOURCE

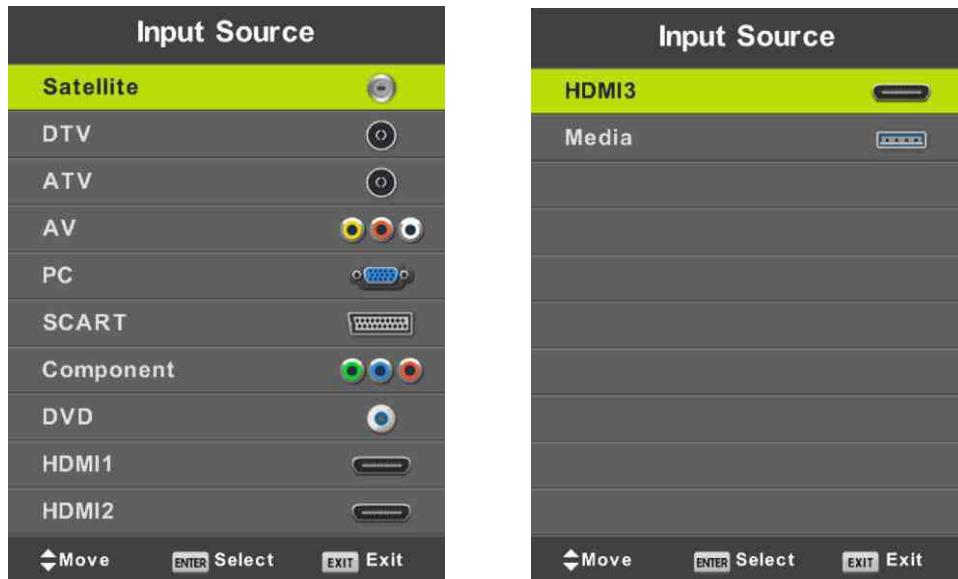

Press **INPUT** button to display the input source list,

Press **▼ / ▲** or **OK** button to select the input source you want to,

Press **OK** button to enter the input source,

Press **EXIT** button to quit.

* No DVD, NO S2, only 2 HDMI and match with Android board S805.



First Time Installation

Connect an RF cable from the Tv's input called "RF-In" and to your TV Aerial socket.


Select Language

Press **◀ / ▶** button to select the language to be used for menus and message.

Select Country


Press **▼ / ▲** button to highlight country menu.

Press **◀ / ▶** button to select the country you want to.

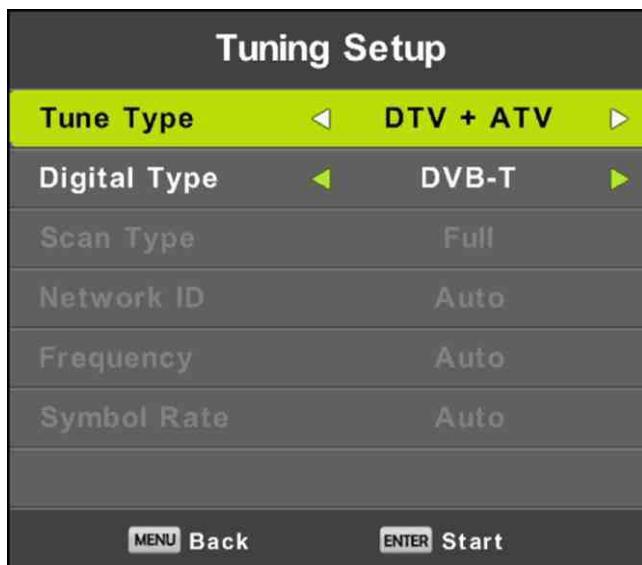

Auto Tuning

First tuning ATV, press Menu and left arrow button to skip ATV tuning,
Second tuning DTV, press Menu and left arrow button to skip DTV tuning.

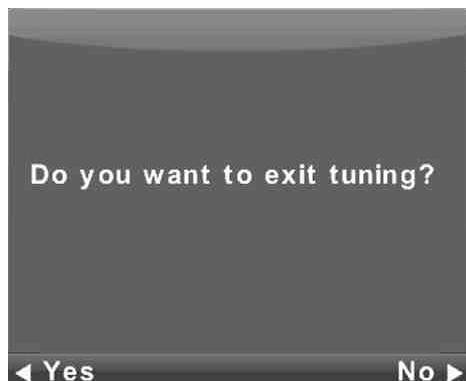

Main Menu Operation

Channel Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **CHANNEL** in the main menu.


In DTV Source.





1. Press **▼ / ▲** button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Auto Tuning

Press **▼ / ▲** button to select Auto Tuning, then press **Enter/▶** button to enter.

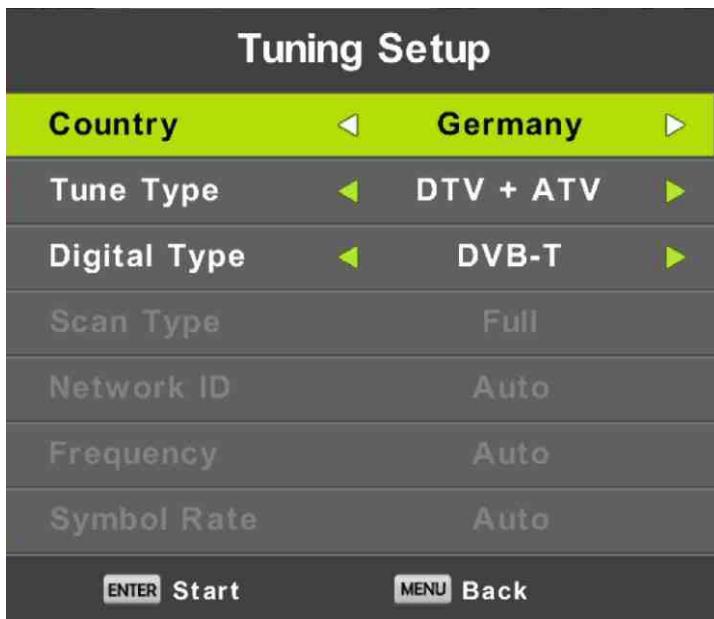

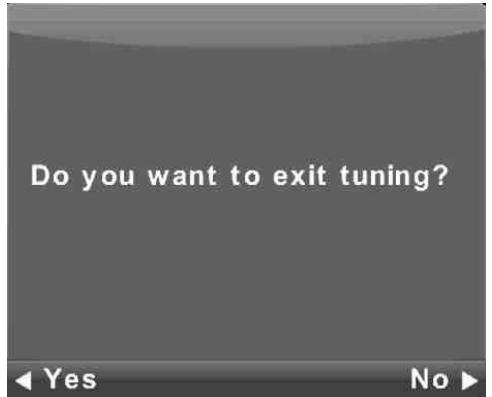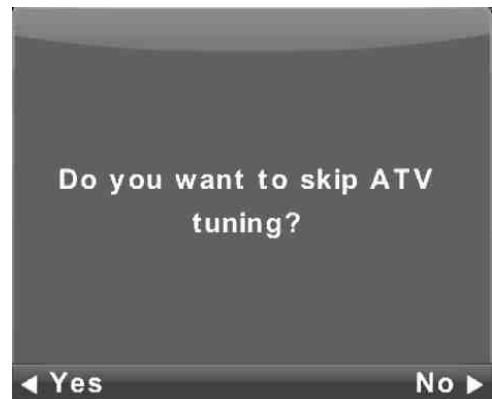

ATV Manual Tuning



Current CH
Set the channel number.

Color System
Select the color system
(Available System: AUTO, PAL, SECAM)

Sound System
Select the Sound system

Fine-Turn
Adjust the frequency of the channel finely.

Search
Start searching channel.

DTV Manual Tuning

Press ▼ / ▲ button to select DTV Manual Tuning, then press **Enter** button to enter sub-menu.
Press ◀ / ▶ button to select channel, then press **Enter** button to search program.



Program Edit

Press ▼ / ▲ button to select Program Edit, then press **Enter** button to enter sub-menu.



The three colored key is the shortcut key for programming the channel.

First press ▼ / ▲ to highlight the channel you want to select, then:

Press the **Red** button to delete the program in the list.

Press the **Yellow** button to move the channel in favorite list.

Press the **Blue** button to skip the selected channel.


Press Fav button to add or remote the channel to your favorite list.
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Schedule List

Press ▼ / ▲ button to select Schedule List, then press **Enter** button to enter sub-menu.
It is available in source.

Schedule List			
1/1	Programme Title	Date	(0% Used) 11:44 05 Nov
1	[DTV]Manual Timer Set	05/11/2010	1 ONE HD
			Manual Timer Set
			11:47~12:17

Press the **YELLOW** button to enter the interface below.

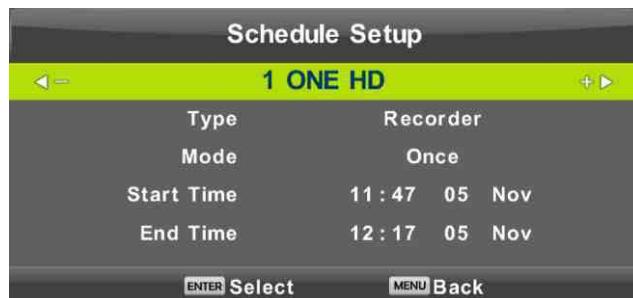

When the time appointment is conflict , it will produce a warning message.



Signal Information

Press ▼ / ▲ button to select **Signal Information**, press the **Enter** button to see the detail information about the signal. Only available when there is signal in DTV.

Signal Information	
Channel: 5 (177.50MHz)	
Network ...	
Modulation	Unknow
Quality	100 (Good)
Strength	0 (Weak)

The CHANNEL List in Satellite Source.



Auto Tuning

Press ▼ / ▲ button to select Auto Tuning, then press **Enter/▶** button to enter.



Press MENU button to call out the main menu.

Highlight "Channel" using navigation buttons and press OK to enter.
Then highlight "Auto Tuning" and press OK to enter.

Country: Select your country.

Satellite: Select an available satellite.

Scan Mode: Select your scan mode.


Channel Type: Select a channel type.

Service Type: Select a service type.



Dish Setup

Press ▼ / ▲ button to select Dish Setup.then press Enter/▶ button to enter.

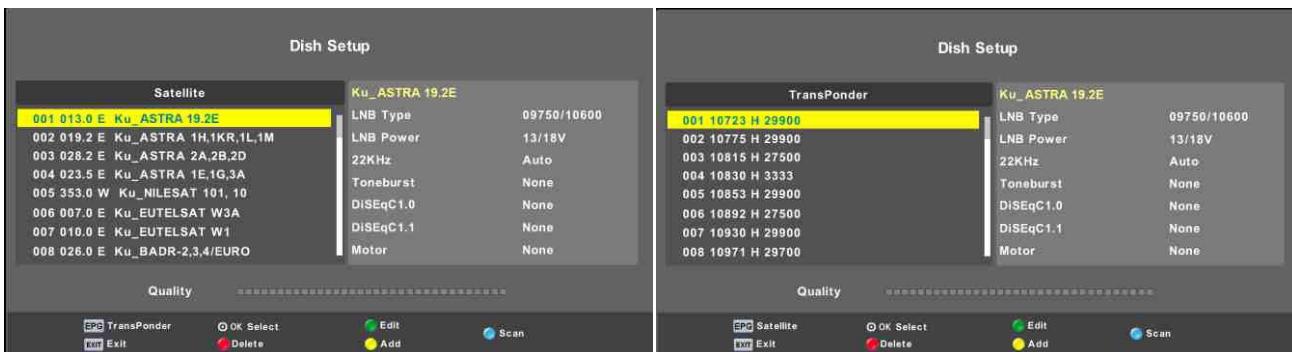

Press MENU button to call out the main menu.

Highlight "Channel" using navigation buttons and press OK to enter it.

Then highlight "Dish Setup" and press OK to enter it.

Press LEFT/RIGHT navigation button to highlight Left, Middle or Right column.

Press EXIT button to return.

A. When the "Satellite" column is highlighted:

(1)Press **YELLOW** button to enter Add menu.

Satellite Name

Press RIGHT navigation button to enter rename page.

Use navigation buttons to complete a new name.

Longitude Direction

Press LEFT/RIGHT navigation button to select desired option.

Longitude Angle

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Band

Press LEFT/RIGHT navigation button to select desired option.

(2)Press **GREEN** button on remote control to enter Edit menu.

The operations of Edit menu are the same as Add menu.

(3)Press **BLUE** button on remote control to enter Scan menu.

Press UP/DOWN navigation button to highlighted desired item.

Press RIGHT navigation button to select desired Scan Mode, Channel Type and Service Type.

(4)Press **RED** button to delete.

Press **EPG** button to switch satellite and Transponder.

B. When the "Transponder" (Middle) column is highlighted:

(1)Press **YELLOW** button on remote control to enter Add menu.

Frequency

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Symbol(ks/s)

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Polarity

Press LEFT/RIGHT navigation button to select desired option



(2)Press **GREEN** button on remote control to enter Edit menu

The operations of Edit menu are the same with Add menu.

(3)Press **BLUE** button on remote control to enter Scan menu.

Press UP/DOWN navigation button to highlighted desired item.

Press LEFT/RIGHT navigation button to select desired Scan Mode, Channel Type and Service Type..

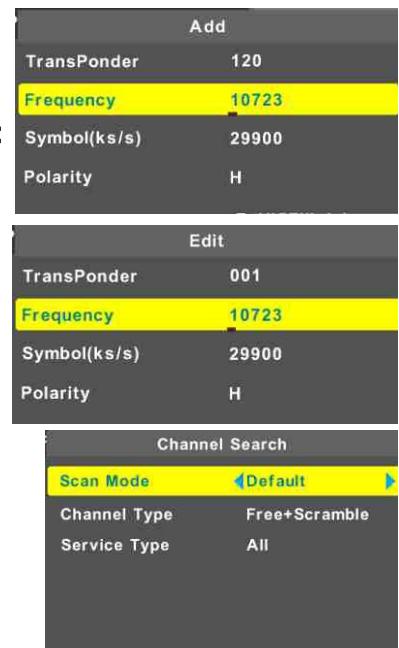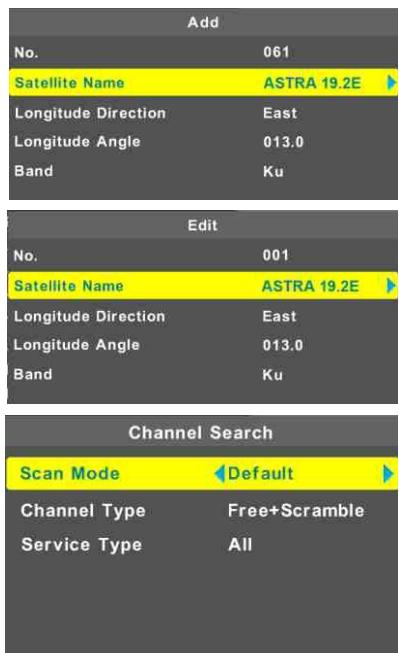

C. When the “Ku_ASTRA...” (Right) column is highlighted:

LNB (Low Noise Block) Type

Press LEFT/RIGHT navigation button to enter submenu. Then use UP/DOWN navigation button to select desired option.

LNB Power

Press LEFT/RIGHT navigation button to select desired option.

22 kHz

Press LEFT/RIGHT navigation button to select desired option.

Toneburst

Press LEFT/RIGHT navigation button to select desired option.

DisEqc1.0 (Digital Satellite Equipment Control)

Press LEFT/RIGHT navigation button to select desired option.


DisEqc1.1

Press LEFT/RIGHT navigation button to select desired option.

Motor

Press LEFT/RIGHT navigation button to select desired option.

The CHANNEL List in ATV Source.

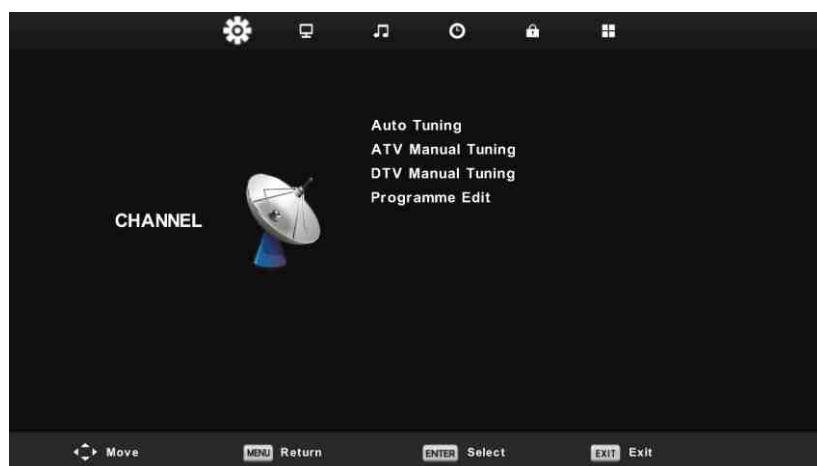

Auto Tuning/ATV Manual Tuning /DTV Manual Tuning/Programme edit menu are same to menu in DTV.

Picture Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **PICTURE** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **PICTURE** menu.

2. Press **OK** button to adjust.

3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Picture Mode

Press **▼ / ▲** button to select Picture Mode, then press **OK** button to enter sub-menu.

You can change the value of contrast, brightness, color, sharpness and tint when the picture is in **Personal** mode.

TIPS: You can press PMODE button to change the Picture Mode directly.



Contrast/ Brightness/ Color/ Tint / Sharpness

Press **▼ / ▲** button to select option, then press **◀ / ▶** button to adjust.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Brightness Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

Color Adjust the saturation of the color based on your own like.

Tint Use in compensating color changed with the transmission in the NTSC code.

Sharpness Adjust the peaking in the detail of the picture.

Color Temp

Change the overall color cast of the picture.

Press ▼ / ▲ button to select Color Temperature , then press **OK** button to enter sub-menu.

Press ◀ / ▶button to select. (Available Picture mode: Cool, Medium, Warm).

You can change the value of red,green and blue when the color temperature is in **User** mode.



Cold Increase the blue tone for the white.

Normal Set to default color temperature.

Warm Increase the red color for the white.

Noise Reduction

To filter out and reduces the image noise and improve picture quality.

Press ▼ / ▲ button to select Noise Reduction , then press **OK** button to enter sub-menu.



Off Select to turn off video noise detection.

Low Detect and reduce low video noise.

Middle Detect and reduce moderate video noise.


High Detect and reduce enhanced video noise.

Default Set as Default.


Sound Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SOUND** in the main menu.

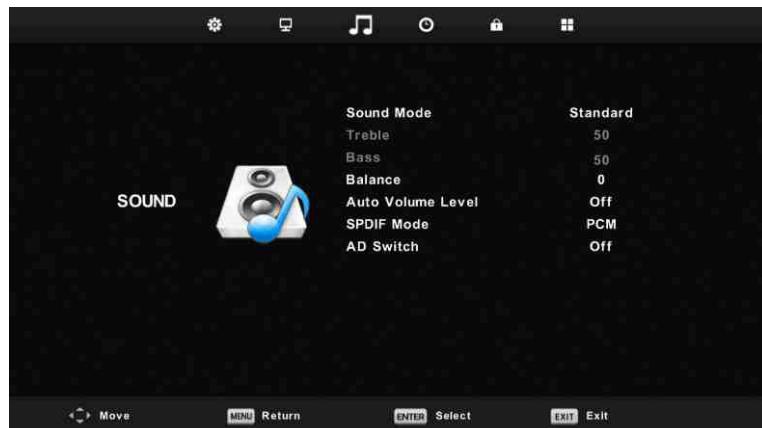

1. Press **▼ / ▲** button to select the option that you want to adjust in the **SOUND** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

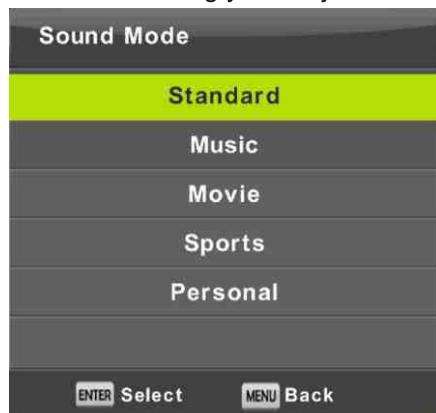

Sound Mode

Press **▼ / ▲** button to select Sound Mode, then press **Enter** button to enter sub-menu.

Press **▼ / ▲** button to select.

You can change the value of Treble and Bass when the sound is in Personal mode.

TIPS: You can press **S MODE** button on the remote control to change the Sound Mode directly.

Standard	Produces a balanced sound in all environments.
Music	Preserves the original sound. Good for musical programs.
Movie	Enhances treble and bass for a rich sound experience.
Sports	Enhances vocals for sports.
Personal	Select to customize picture settings.

Note: The treble and bass are only available in User mode, you can adjust them as you like.

Balance

Press **▼ / ▲** button to select option, Press **◀ / ▶** button to adjust.

Auto Volume level

Press **▼ / ▲** button to select Auto Volume Level, then press **◀ / ▶** button to select On or Off.

SPDIF Mode

Press **▼ / ▲** button to select SPDIF Mode, then press **◀ / ▶** button to select Off / PCM / Auto.

AD Switch

Press **▼ / ▲** button to select AD Switch, then press **◀ / ▶** button to select On or Off.

Amblyopia function for the blind, the tracks will be mixed describe the current screen .

It need codestream to support.

NOTE:

Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.

Auto Volume: This item is used for reducing the difference between channel and program's volume automatically.

Time Menu


Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **TIME** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **TIME** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.


Time Zone

Press **▼ / ▲** button to select Time Zone, then press **Enter** button to enter sub-menu.

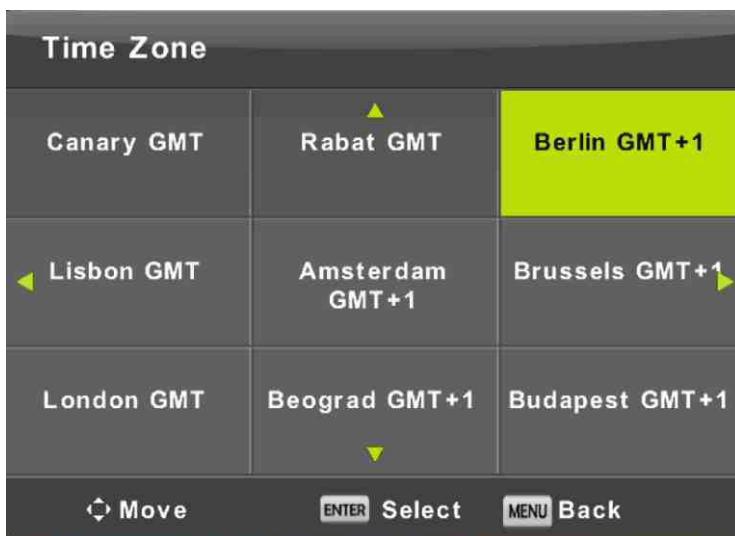

Press **▼ / ▲ / ◀ / ▶** button to select time zone.

Sleep Timer

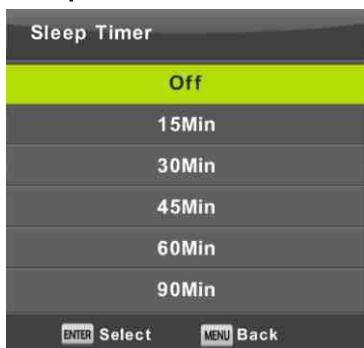

Press **▼ / ▲** button to select Sleep Timer, then press **Enter** button to enter sub-menu.

Press **▼ / ▲** button to select.
(Available options are: Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).

Auto Standby



Press ▼ / ▲ button to select Auto Standby, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ button to select.

Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically. If you do any operation, it will reset the time.

OSD Timer



Press ▼ / ▲ button to select OSD Timer, then press **Enter** button to enter sub-menu.

Press ◀ / ▶ button to select.

Lock Menu

Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **Lock** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **LOCK SYSTEM** menu.
2. Press **Enter/◀ / ▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu

Lock System



Press **▼ / ▲** button to select Lock System,
then press **Enter** button to make the following 3 options valid.

Default password is 0000, and if forget what you set,
please call the service center.

Set Password



Press **▼ / ▲** button to select Set Password,
then press **Enter** button to enter sub-menu to set new password.

Channel Lock



Press ▼ / ▲ button to select Channel Lock
then press **Enter** button to enter sub-menu to select.
Press **Green** button to lock or unlock the channel.


Parental Guidance



Press ▼ / ▲ button to select Parental Guidance,
then press **Enter** button to enter sub-menu to select the number of age
which is suitable for your children.

Key Lock

Press ▼ / ▲ button to select Key Lock, then press ◀ / ▶ button to select Off or On.
When Key Lock's statue is on, you can't use the Key panel button.

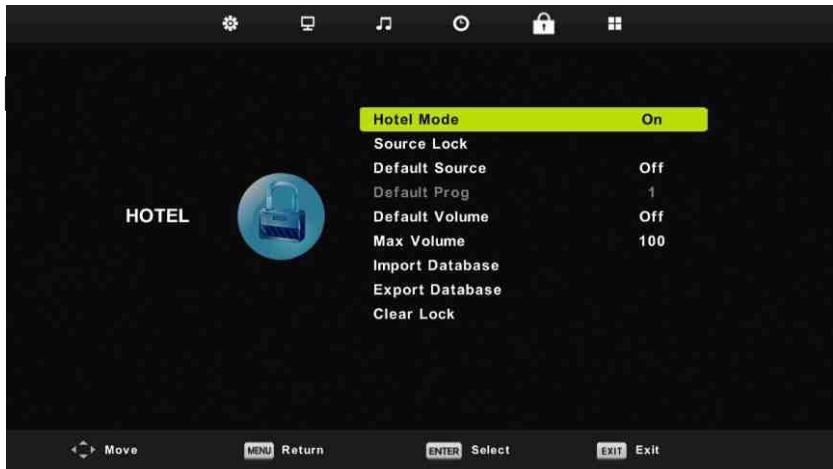

1. Press ▼ / ▲ button on the remote control to select hotel mode in the **Lock** menu.
2. Press **Enter** button on the remote control to enter the sub-menu.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Hotel Mode

Press ▼ / ▲ button to select Hotel Mode, then press ◀ / ▶ button to select on or off.

Source Lock

Press ▼ / ▲ button to select Source Lock, then press **Enter** button to enter sub-menu to select.

Default Source

Press ▼ / ▲ button to select Default Source, then press **Enter** button to enter sub-menu to select.

Default Prog

Press ▼ / ▲ button to select Default Prog, then press ◀ / ▶ button to adjust.

It is available when the default source is TV.

Max Volume

Press ▼ / ▲ button to select Max Volume, then press ◀ / ▶ button to adjust.

Import Database

We can import parameter of Audio/Channel/Lock/Setup from USB disk. Insert USB disk, choose "Import Database" and press enter to import.

Export Database

We can export parameter of Audio/Channel/Lock/Setup to USB disk. Insert USB disk, choose "Export Database" and press Enter to Export.

Clear Lock

Press ▼ / ▲ button to select Clear Lock, then press **Enter** button to clear the setting you have done before.

Setup Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SETUP** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **SETUP** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

OSD Language

Select an OSD menu language can be displayed. Default English is selected as menu language.

Press **▼ / ▲ / ◀ / ▶** button to select Menu Language.



TT Language

Press **▼ / ▲** button to select TT Language, then press **Enter** button to enter sub-menu.

Press **▼ / ▲ / ◀ / ▶** button to select TT language.



Audio Languages

Press ▼ / ▲ button to select Audio Languages, then press **Enter** button to enter sub-menu.

Press ◀ / ▶ button to select the primary of Audio Languages.

Press ▼ / ▲ / ◀ / ▶ button to select the Audio Languages.



Subtitle Language

Press ▼ / ▲ button to select Subtitle Language, then press **Enter** button to enter sub-menu.

Press ◀ / ▶ button to select the primary of Subtitle Language.

Press ▼ / ▲ / ◀ / ▶ button to select the Subtitle Language.



Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired, then press **Enter** button to select On or Off.

PVR File System

Press ▼ / ▲ button to select PVR File System, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ button to select Check PVR File System ,
then press **Enter** button to enter. Then it will check the USB speed.



Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ button to select aspect ratio. (Available options are: Auto, 4:3,16:9, Zoom1, Zoom2).



Blue Screen

Press ▼ / ▲ button to select Blue Screen, then press **Enter** button to select On or Off.

First Time Installation

Press ▼ / ▲ button to select First time installation, then press **Enter** button to enter.

Reset

Press ▼ / ▲ button to select Reset, then press **Enter** button to enter sub-menu.

Software Update(USB)

Press ▼ / ▲ button to select Software Update (USB), plug your USB device in the USB slot, then press **Enter** button to update the right software.

HDMI CEC




HDMI CEC, then press **Enter** button to enter the sub-menu.

CEC Control	Press ◀ / ▶ button to turn the CEC Control on or off.
Audio Receiver	Press ◀ / ▶ button to turn the Audio Receiver on or off.
Device Auto Power Off	Press ◀ / ▶ button to turn the Device Auto Power on or off.
TV Auto Power On	Press ◀ / ▶ button to turn the TV Auto Power On on or off.
Device List	Press Enter button to show list of device.
Device Menu	Press Enter button to enter the menu of device.

EPG

Press EPG button on remote control to enter EPG menu page.

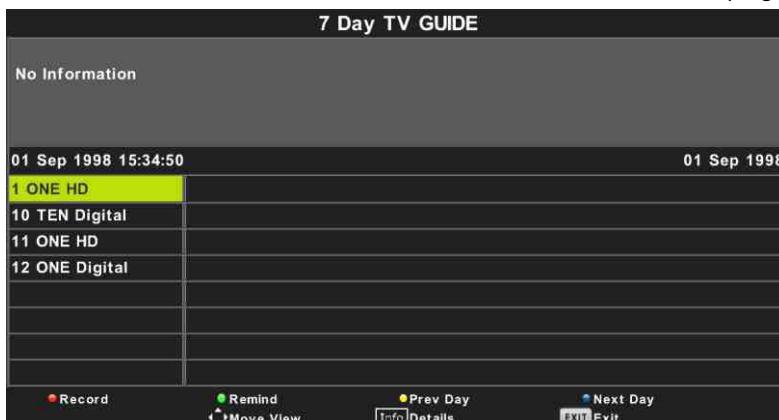

Press UP/DOWN navigation button to select preferred program.

Press LEFT/RIGHT navigation button to switch between left column and right column.

When a program is highlighted (cursor moved to Right column):

Press **RED** button to record program.

Press **GREEN** button repeatedly to set a reminder.

Press **YELLOW** button to display program guide of previous day.

Press **BLUE** button to display program guide of next day.

FAVORITE LIST

When viewing an available channel, press FAV button on remote control to enter Favorite List menu page.

Press UP or DOWN navigation buttons to select preferred channel.

Press OK button to confirm the selection.

NOTE:

To add a favorite channel, please refer to the operations of "DTV Mode > Channel > Programme Edit"



Quick select

When viewing an available channel, press OK button on remote control to enter Channel List menu page.

Press UP or DOWN navigation buttons to select preferred channel.

Press LEFT/RIGHT navigation buttons to select a channel group.

Press OK button to confirm the selection.



Screen Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SCREEN** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **SCREEN** menu.

2. Press **Enter** button to adjust.

3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Auto Adjust

Press **Enter** button to start adjusting **H-Offset/V-Offset/Size/Phase** automatically.

H-Offset.

Adjust the horizontal position of the picture.

Press **▼ / ▲** button to select **H-Offset**, then press **Enter** button to enter sub-menu.

V-Offset

Adjust the vertical position of the picture.

Press **▼ / ▲** button to select **V-Offset**, then press **Enter** button to enter sub-menu.

Size

Adjust the display size.

Press **▼ / ▲** button to select **Size**, then press **Enter** button to enter sub-menu.

Phase

Adjust the horizontal interfering lines.

Press **▼ / ▲** button to select **Phase**, then press **Enter** button to enter sub-menu.

Position Reset

Press **▼ / ▲** button to select **Position Reset**, then press **Enter** button to enter.

Notes:

1. Noise Reduction in PICTURE option is invalid.
2. AD Switch in SOUND option is invalid.
3. TIME menu and description are the same as that for Air mode.
4. Block Program and Parental Guidance in LOCK option is invalid.
5. Audio Languages, Subtitle Language, Hearing Impaired and PVR File System in SETUP option is invalid.
6. PC mode has no CHANNEL menu.

Media OPERATION

Note: Before operating **Media** menu,Plug in USB device,then press INPUT button to set the Input Source to **Media** .
Press ▼ / ▲ button to select **Media** in the Source menu, then press **Enter** button to enter.



Press ◀ / ▶ button to select the option you want to adjust in the main **Media** menu,
then press **Enter** button to enter.

Photo Menu


Press **◀ / ▶** button to select PHOTO in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.



Press **◀ / ▶** button to select the file you want to watch in the file selecting menu, then press media button to display picture.

When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

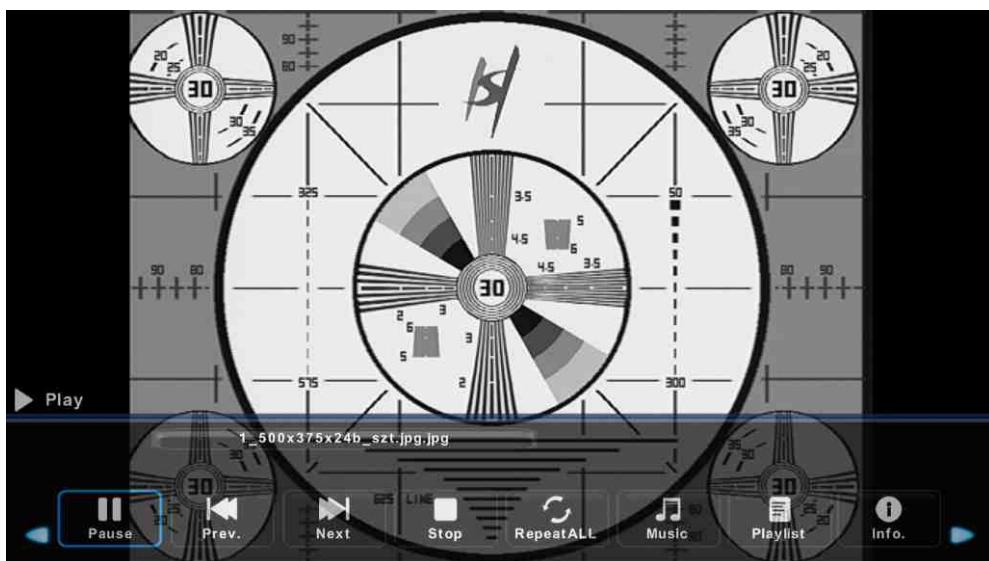

Music Menu

Press **◀ / ▶** button to select MUSIC in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.



Press **◀ / ▶** button to select drive disk you want to watch, then press **Enter** button to enter.

Press **◀ / ▶** button to select return option to the previous menu.



Movie Menu

Press **◀ / ▶** button to select MOVIE in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.




Press **◀ / ▶** button to select drive disk you want to watch, then press **Enter** button to enter.

Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press **Enter** button to operate.

Press **Exit** button to back to the previous menu and exit button to quit the entire menu.

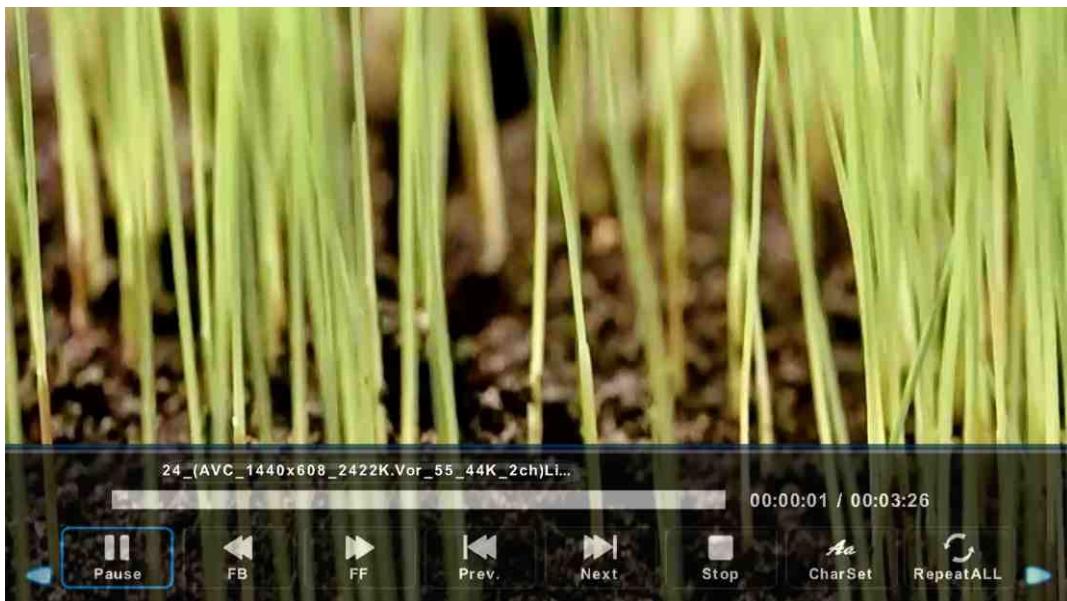

Text Menu


Press **◀ / ▶** button to select TEXT in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.



Press **◀ / ▶** button to select drive disk you want to watch, then press **Enter** button to enter.

Press **◀ / ▶** button to select return option to back to the previous menu.

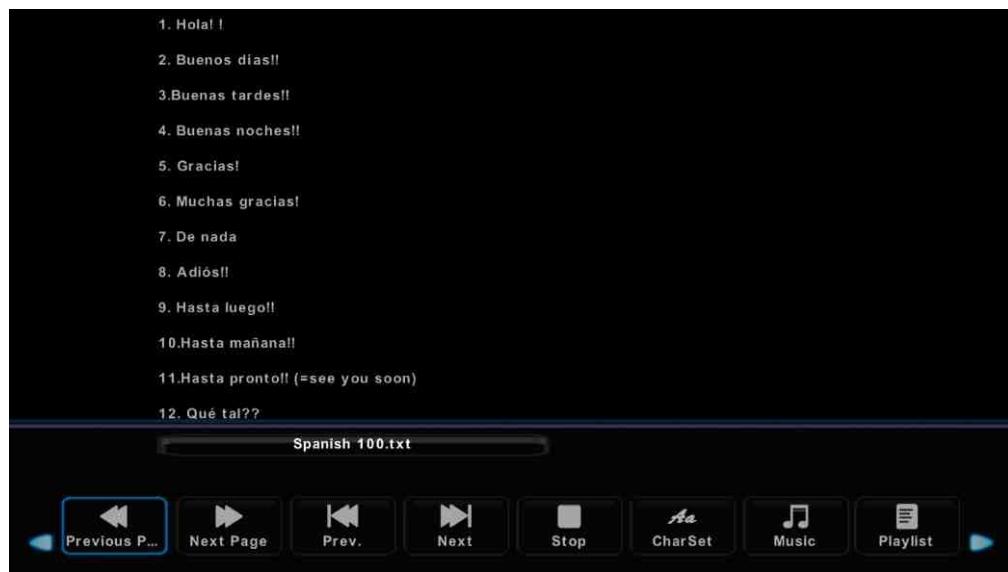



WARRANTY INFORMATION

All TELEFUNKEN TVs have a two-year manufacturer's warranty as standard to protect against any manufacturing and material faults and defects during this warranty period. For further information about this warranty please visit www.telefunken.ie

Register your product for free!

Register your TV now for free on our warranty web portal by scanning the QR Code or visit www.telefunken.ie

Scan the QR code →



Please retain your receipt/ proof of purchase.

You will need to retain your proof of purchase/ receipt as this will be requested by our service centre in the event of a warranty support request.

Product manufactured for, imported & distributed by:
Montara Ltd, Ballycurren, Cork, Ireland T12 X9Y6.

TELEFUNKEN trademarks are registered trademarks of
TELEFUNKEN Licenses GmbH used under trademark license for this product.